

Piraña Super PNP Servo Connection Notice

During quality assessment of the initial shipment of the Piraña Super PNP, one mistake was found:

1. It was found that the factory may have improperly configured the elevon and rudder connections in the FT Aura 5 Lite. Check and verify that your servos are plugged in to the ports as shown in the chart below. If they are not configured in this way, remove them from the FT Aura 5 Lite and configure them accordingly. This is also shown properly on page 7 of the instruction manual.

DEFAULT AURA CONNECTIONS	
S1.....	Throttle
S2.....	Left Elevon
S3.....	Right Elevon
S4.....	Left Rudder
S5.....	Right Rudder
Port B.....	Serial Receiver Input
Mini Port B....	Spektrum Remote Receiver Input

Only use throttle in port S1 if your receiver does not have a functioning throttle port